



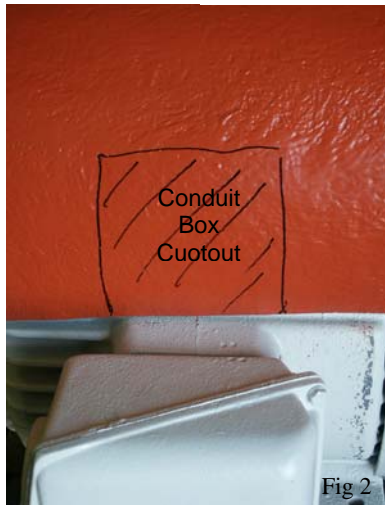

www.orangeshield.com

## INSTALLATION INSTRUCTIONS

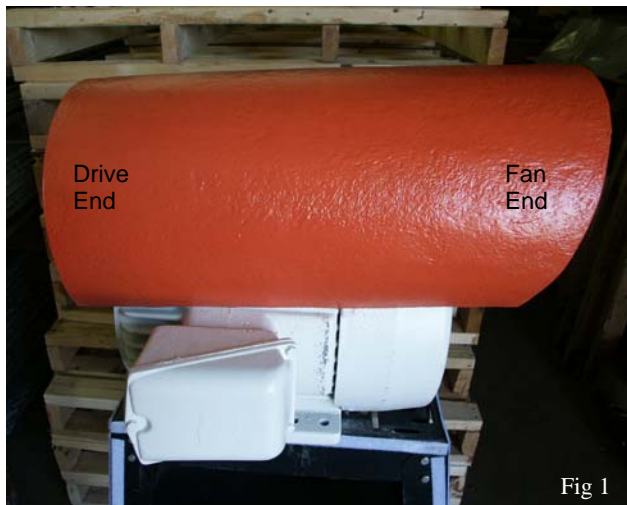

### ***Just Cut and Snap. - 4 easy steps***

- STEP 1:** Covers arrive without a cutout for the conduit box or lifting lugs (if any). Align the back end of the cover so it extends about 1" past the drive end of the motor. *Fig 1.* (Be sure to clean the motor cooling fin channels and air intake before installing the cover).
- STEP 2:** With a black pen, mark the location of the conduit box cutout. *Fig 2.*
- STEP 3:** Using a jig saw or similar type saw, cut out the conduit box slot in the side of the cover. *Fig 3.*
- STEP 4:** Stretch the sides of the cover and snap over the motor. The angled end of the cover should extend out and over the air intake. *Fig 4.*



**Worthington Products, LLC**

3405 Kuemerle Ave NE / Canton, OH 44705-5009

Toll Free: 800.899.2977 / Fax: 330.452.7495 / Email: pmeeks@orangeshield.com